

Fitment Guide

Honda S2000 2006




Submitted by Rickie, Perth, Australia

There are 3 wires to connect, ground, ignition and the RPM signal.
All 3 wires can be accessed at the passenger side dashboard.

Wire	S2000	Shift-I
Ground.....	Black.....	Black
Ignition.....	Yellow.....	Black/Red
RPM Signal	Blue	Black/Blue



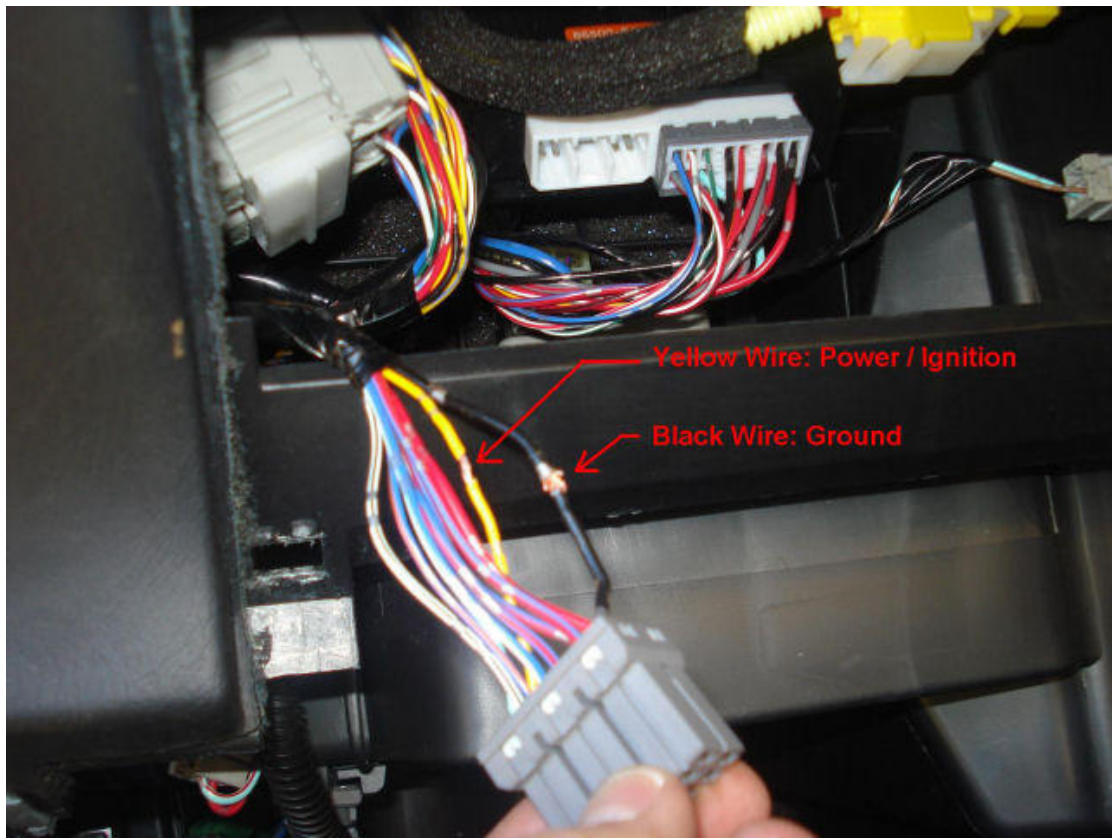







Leave the default "calibration value" at 2.

The set points I have set at 6000rpm (low) and 8500rpm (high).

