



Supplementary Fitment Guide

BMW R1200GS



Submitted by customer



V1.0



18-24 gauge Posi Taps were used to connect the wires. For the RPM connection, I stripped away the tape near the end of the right cylinder's spark plug cable and tapped into the red/black wire. After the tap was in place, I wrapped the whole junction in silicone tape to weather proof it.

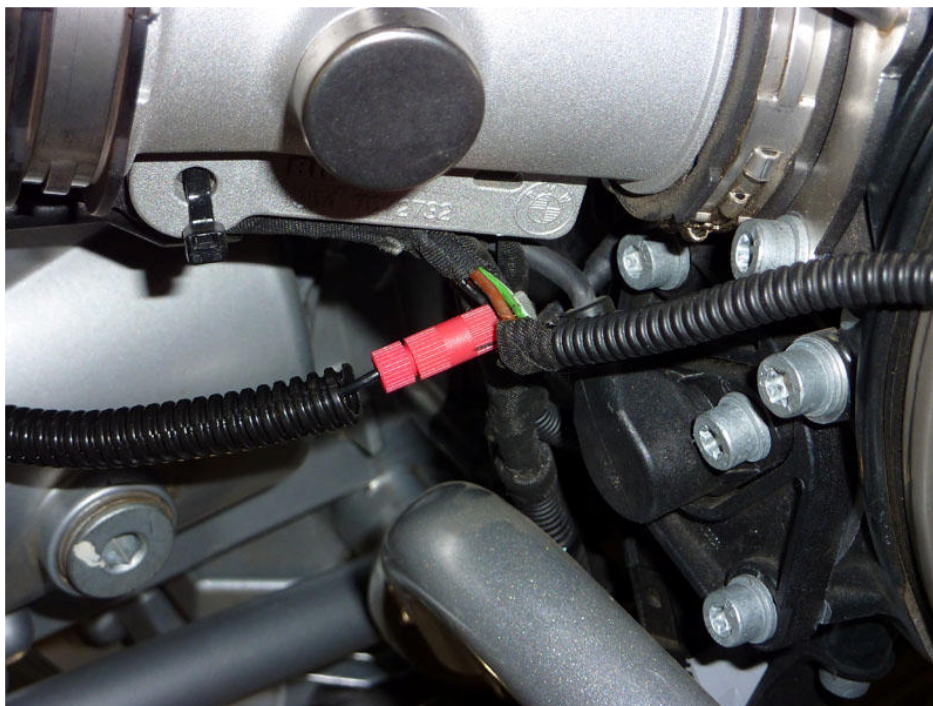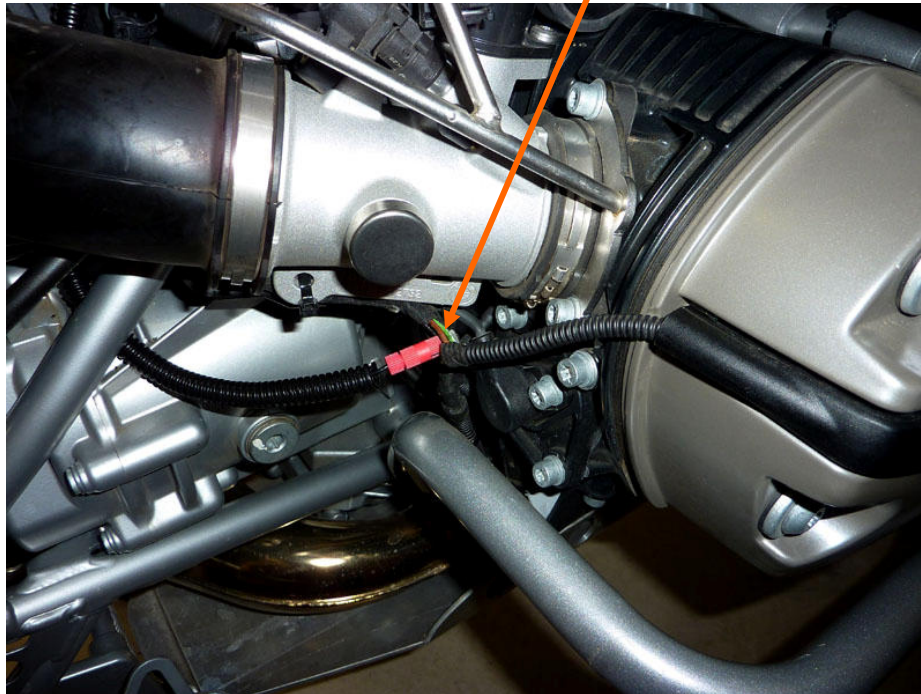

I set the adjustment at .5 and the unit fired up perfectly.