



Supplementary Fitment Guide

2006 C6 Z06 Corvette




Written by Bob
BEZ06, CorvetteForum.com

V1.0






I tapped into switched +12 volts. It's the "red" wire in the bundle going to the sensor just to the left of the ignition switch. You can find a ground through just about any black wire on the Corvette.

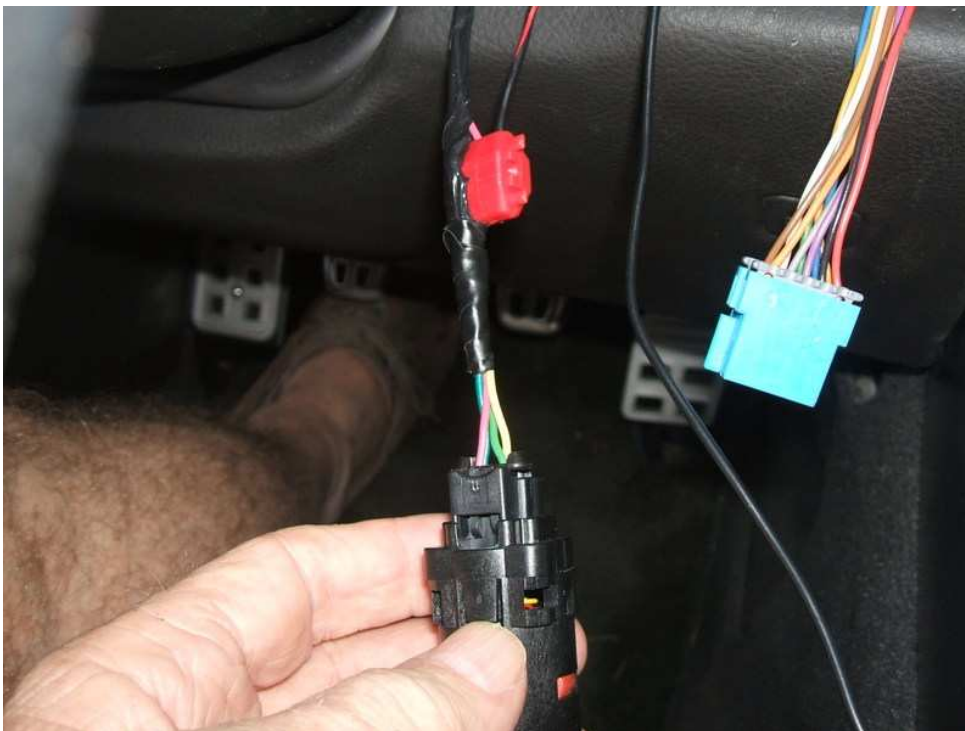

For an RPM signal I tapped into the white wire in the connector that goes to the Tacho on the back of the instrument cluster.

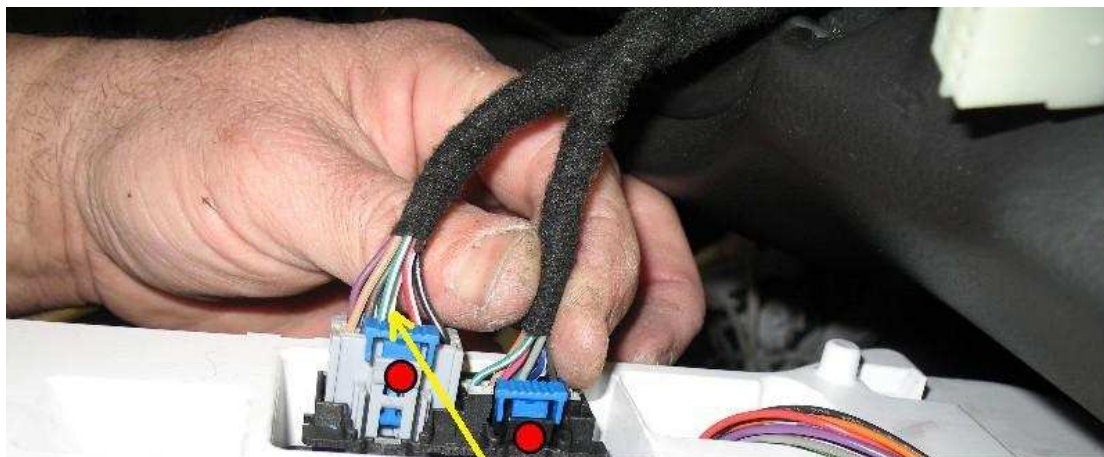

Arrow points to "white" wire that you can tap into for RPM signal on C6 Corvette
This is the connector on the rear of the instrument cluster

In the above picture you're looking at the back of the instrument cluster. The wire bundle between the fingers is to the speedometer. The connector on the left with the "white" wire you are looking for connects into the tachometer.

Mounting bracket made...



